

ALUMINUM FAST FLOW ROOF DRAINS


"INTIMIDATOR PLUS"

THE "INTIMIDATOR PLUS" 10" RETROFIT DRAIN WITH 14" DIAMETER CLAMPING RING

- Constructed of a heavy gauge Spun Aluminum
- Bolt-in-place PVC strainer dome standard, cast iron or aluminum strainers optional
- 10" Retrofit Drain (9.625" OD)
- 18" Diameter Flange x 12" long outlet
- 14" Diameter Aluminum Clamping Ring
- Quick & Easy to install & maintain
- Efficient and economical
- Optional expanding tape for anti-backup
- Fits in pipe sizes 9.75" - 10.25"



W/ 10" Aluminum Dome and
no expanding tape

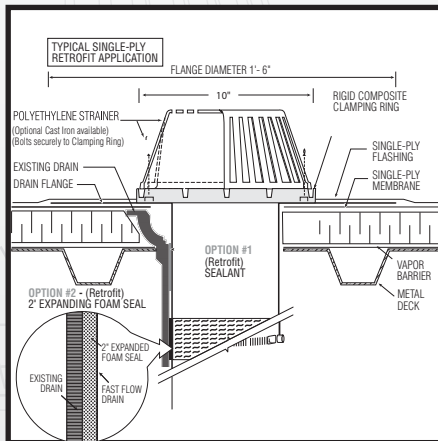

INSTALLATION

STEP 1: Determine exact dimension of drain pipe. Select appropriate drain to fit inside the existing drain pipe. Retro-fit drain may be set in a shallow bowl or directly on roof membrane with deck opening of at least 1" (25mm) greater than the leader size into which the drain will be inserted. The flange is adaptable to all membranes. Fasten drain to deck with others fasteners.

STEP 2: For Fast Flow with expandable tape the installer removes the exterior restraining tape and immediately sets the retro drain in place. The released tape gradually expands to fill the space between the Fast Flow drain and the existing drain sleeve making the connection watertight.

STEP 3: Flash drain flange in accordance with membrane manufacturer's instructions.